



PhotoPrint 19 Manual for Installation


- 1、 Plug the USB flash disk into the USB port of PC.
- 2、 Find the folder  ,double click to open it.
- 3、 dialong box,Select the language.
- 4、 Click OK .

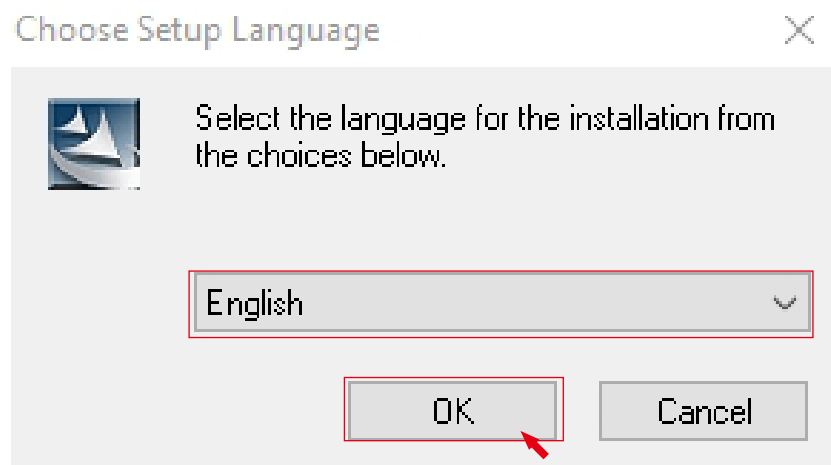


- 5、 Click next.

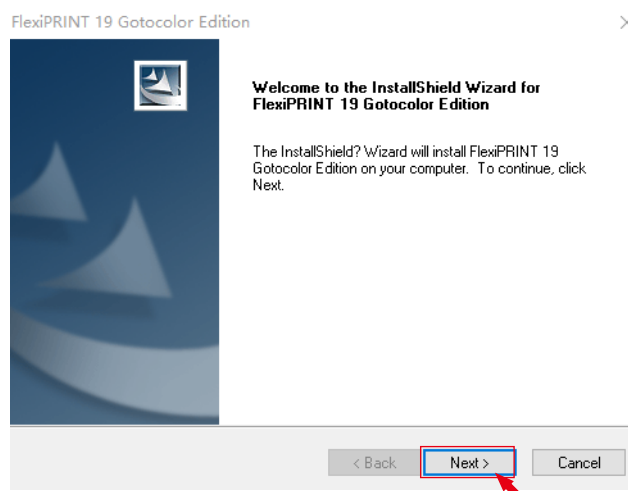


6、Accept the clause and click next.

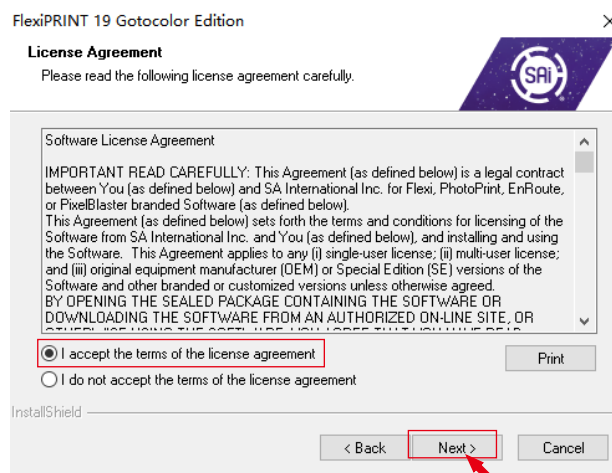


7、Select target folder and click next.

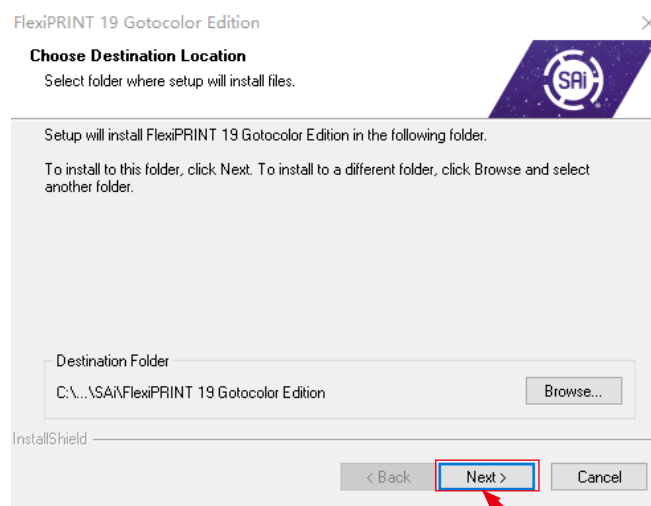


8、Select the installation files and click next.

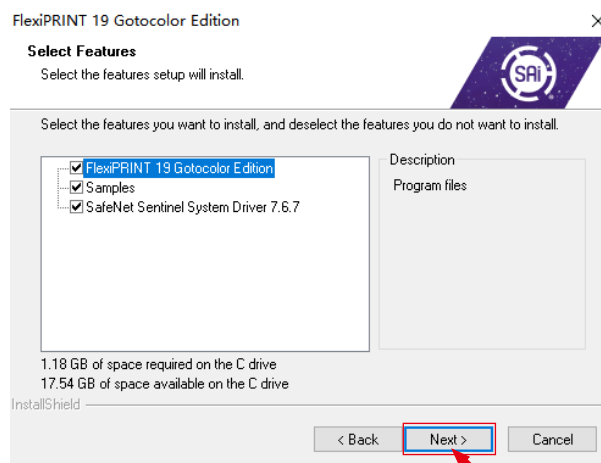


9、Click next.

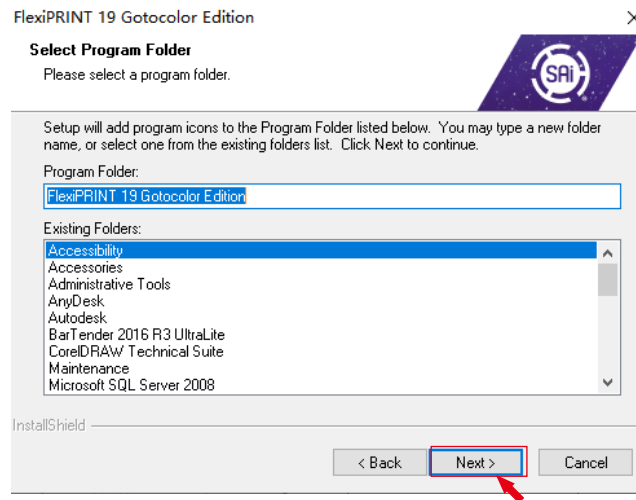

10、A dialog box will pop up, enter the activation code on the back of the software box, and click Next.

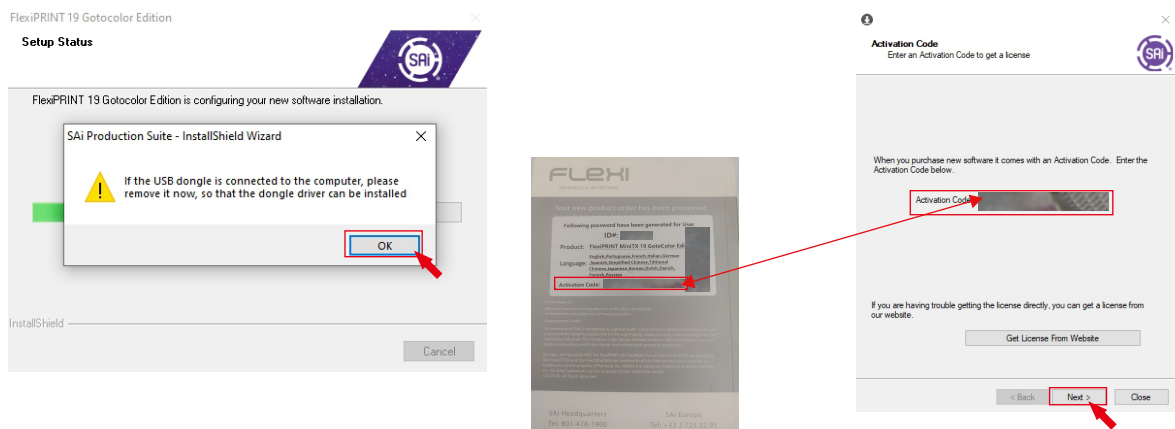


11、Click next.


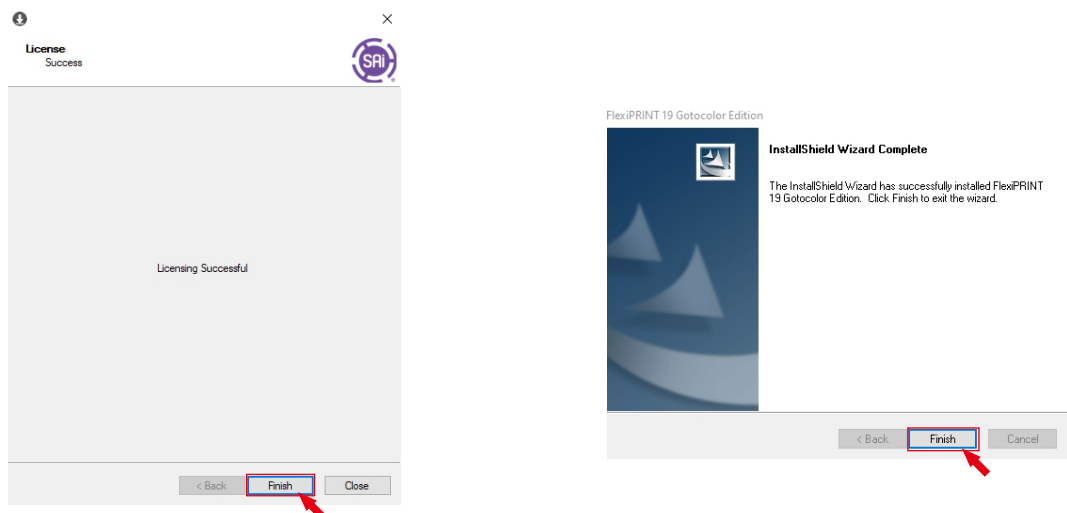


12、 There will be 2 shortcut shown on the desktop, double click to run the .


13、 The window shown as follow, select the type as 'GotoColor-UV6090', click next.

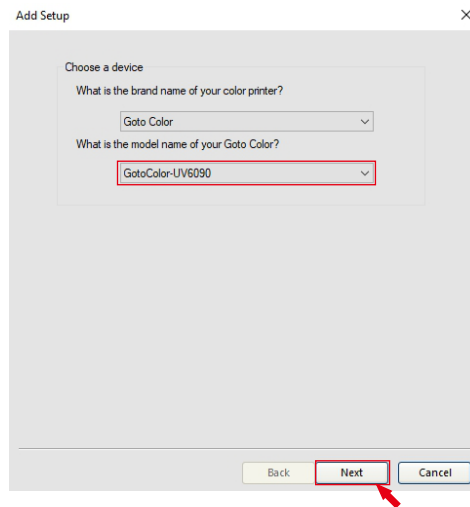


14、 Setup the (TCP/IP) to 127. 0. 0. 1 .

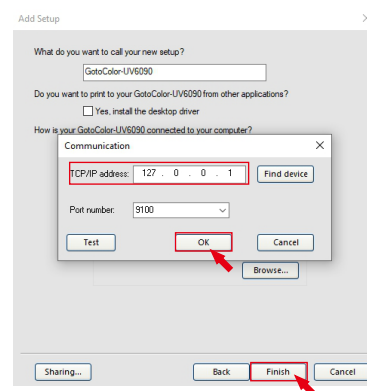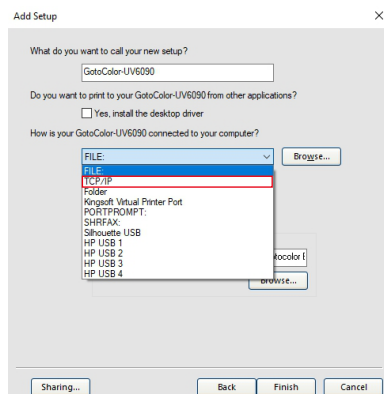


15、 Click “fininh” will show the window as follow.

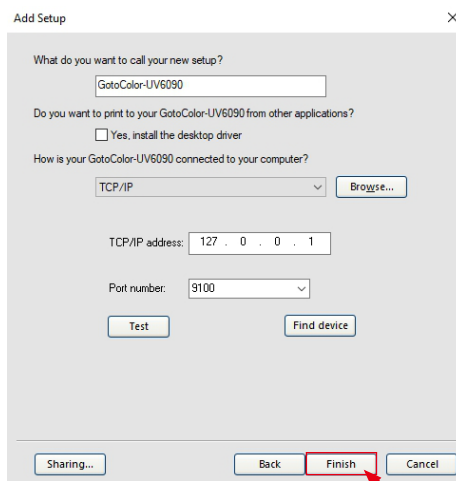




16、A dialog box shown,means installation complete successfully.

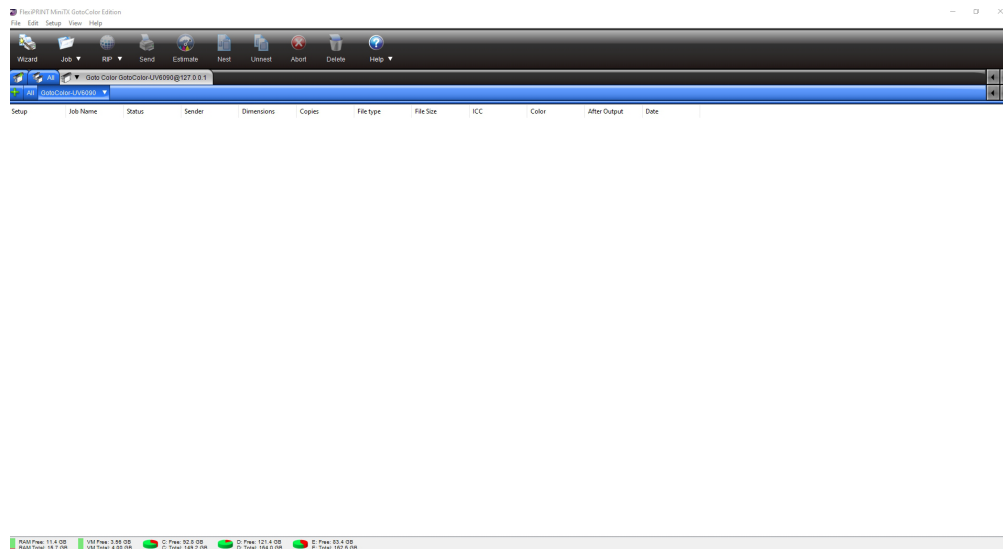


17、Click the menu **GotoColor-UV6090** to setup the default Job properties.

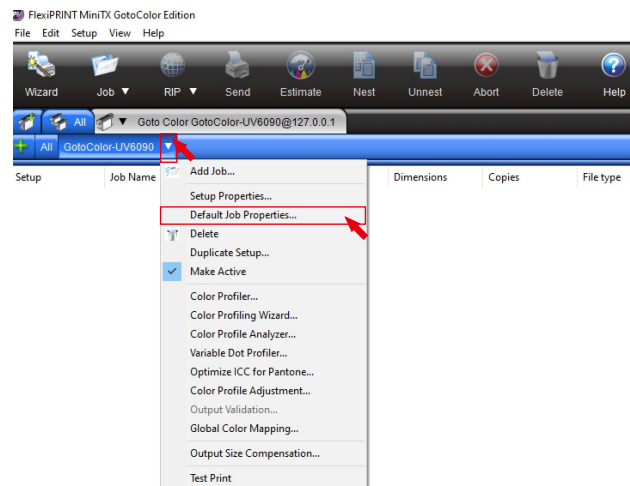


18、In the parameter setup page,Set the width =60cm,and height =90cm.

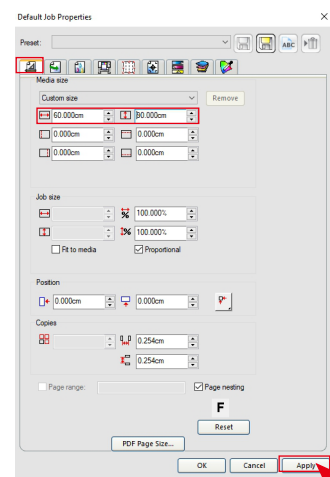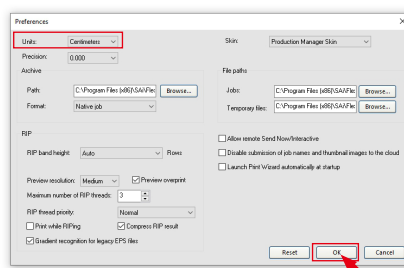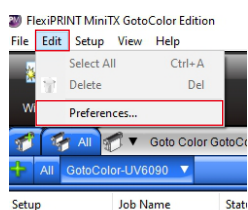


19、 In the parameter setup page,click           

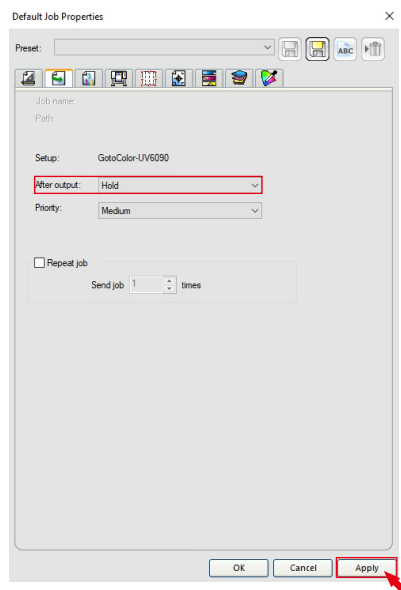


20、 In the parameter setup page,click            ,Add the ICC curve through the output profile,Check other options.

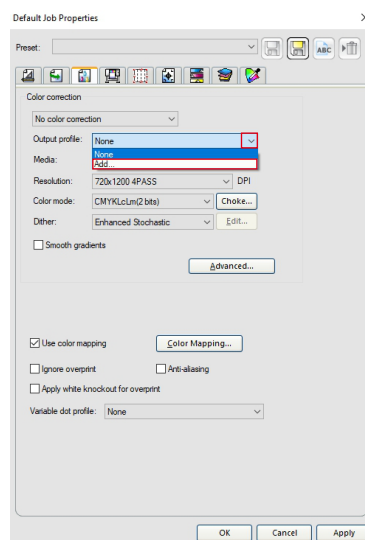


21、 The ICC curve files will be saved in the USB flash disk,select all the files.

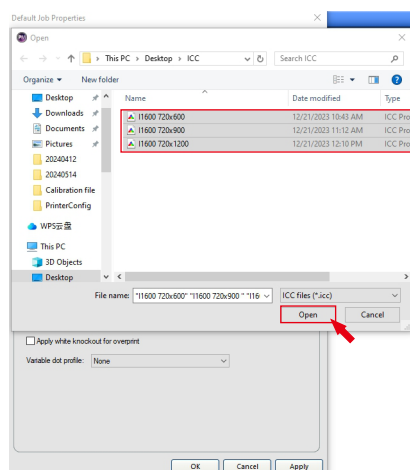

22、The following dialog box shown means the ICC curve installation complete.

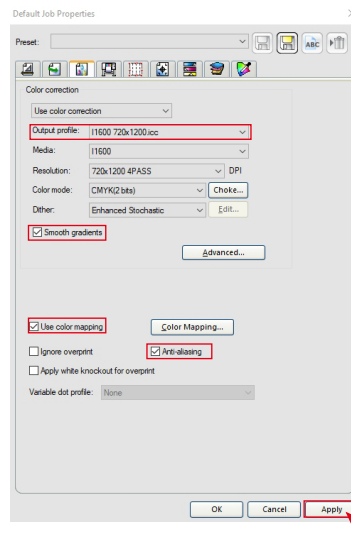

23、In the default parameter page,click  .

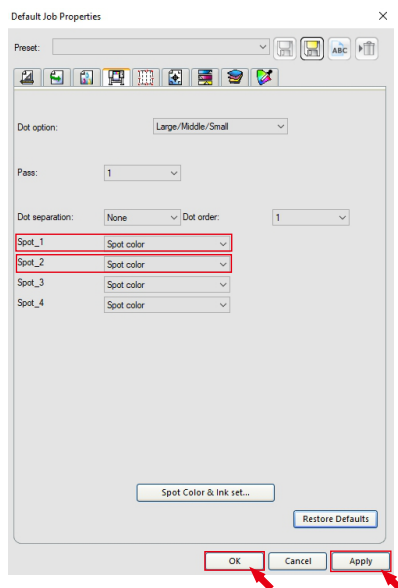

24、After all the setup finish,click "apply",then click "ok",to complete the default parameter